

Telephone 800-500-9311  
Telephone 864-573-9200  
Fax 864-573-9299

# OEC FLUID HANDLING INC.

SUBSIDIARY OF OILMEN'S EQUIPMENT CORP.  
[www.oecfh.com](http://www.oecfh.com)

140 Cedar Springs Rd.  
P. O. Box 2807  
Spartanburg, SC 29304

■ Stocked Items 11/06/03

## PD Pumps

- ARO Ingersoll-Rand
- Blackmer Vane  
Blackmer/Abaque Peristaltic  
Blackmer "C" Eccentric Disc
- Alfa Laval-TriClover Lobe
- APV Lobe
- Tuthill Gear  
Tuthill Lobe  
MonoFlo Progressive Cavity

## Centrifugal Pumps

- Alfa Laval-TriClover Sanitary
- APV Crepaco
- Deming End Suction  
Deming Vertical Turbine
- Griswold ANSI Pumps
- MP Pump

## Specialty Pumps

Flux Drum

## Petroleum-Fuel Pumps

- Gorman-Rupp
- Dresser Wayne Corp
- Red Jacket  
Graco  
William Wilson Gasboy

## Hand Pumps

- Blackmer
- Tokhiem
- Tuthill Fill-Rite

## Storage Tanks

Stainless Steel ASME  
UL & ASME Carbon Steel  
Fiberglass Tanks  
Chem-Tainer Poly Tanks  
Assmann Poly Tanks  
Snyder Poly Tanks

## Tank Fittings & Vents

- OPW Engineered Systems  
EMCO Wheaton  
Morrison Bros  
Protectoseal

## Mechanical Seals

Utex



## Meters & Instrumentation

- Micro Motion Coriolis
- Neptune Actaris PD
- Tuthill FPP PD
- Liquid Controls PD  
Halliburton Turbine  
Rosemount  
Pressure Transmitters  
Flow Transmitters  
Temperature Transmitters  
Level Transmitters

## Sanitary Products

- Alfa Laval-TriClover Pumps
- Alfa Laval-TriClover Fittings  
Alfa Laval-TriClover Valves  
APV Pumps  
APV Valves  
APV Homogenizers  
B & A Flexible Sanitary Hose

## Liquid Level Gauges

- Protectoseal  
Pneumercator  
Moorman Bros  
Milltronics/Siemens  
Rosemount Level Transmitters

## Hose & Reels

- Goodyear Hose
- Hannay Reels  
Lawrence Composite Hose

## Filters

Filtration Group Bag Filters

## Mixers

Brawn Portable & Sanitary  
Proquip Top Entry Agitators

## Liquid Loaders & Platforms

OPW Engineered Systems  
Green Manufacturing

## Rotary Unions

Deublin

## Custom Liquid Systems

For liquid transfer, batching &  
process metering

**Performance Guaranteed**

CHARLOTTE, NC ■ SPARTANBURG, SC ■ GREENSBORO, NC

# BLACKMER PARTS LIST

960265      **PARTS LIST**  
Page 1 of 4      **109-A00**

## With Installation and Maintenance Instructions HELICAL GEAR REDUCERS MODEL: HROF

Section | 109  
Effective | June 2006  
Replaces | July 2002



### This is a SAFETY ALERT SYMBOL.

When you see this symbol on the product, or in the manual, look for one of the following signal words and be alert to the potential for personal injury, death or major property damage



Warns of hazards that **WILL** cause serious personal injury, death or major property damage.



Warns of hazards that **CAN** cause serious personal injury, death or major property damage.



Warns of hazards that **CAN** cause personal injury or property damage.

### NOTICE:

Indicates special instructions which are very important and must be followed.

### NOTICE:

Blackmer gear reducers **MUST** only be installed in systems, which have been designed by qualified engineering personnel. The system **MUST** conform to all applicable local and national regulations and safety standards.

These instructions are intended to assist in the installation of and maintenance of the Blackmer gear reducer, and **MUST** be kept with the reducer.

Blackmer gear reducer service shall be performed by qualified technicians **ONLY**. Service shall conform to all applicable local and national regulations and safety standards.

Thoroughly review this manual, all instructions and hazard warnings, **BEFORE** performing any work on Blackmer gear reducer.

Maintain **ALL** system and Blackmer pump and reducer operation and hazard warning decals.

### NOTICE:

**Pump manuals, parts lists and other needed literature may be obtained from the Blackmer website ([www.blackmer.com](http://www.blackmer.com)) or by contacting Blackmer Customer Service.**

### WARNING



Hazardous voltage.  
Can shock, burn or cause death.

**Failure to disconnect and lockout electrical power before attempting maintenance can cause shock, burns or death**

### WARNING



Hazardous or toxic fluids can cause serious injury.

**If pumping hazardous or toxic fluids, system must be flushed and decontaminated, inside and out, prior to performing service or maintenance**

### WARNING



Hazardous pressure can cause personal injury or property damage

**Disconnecting fluid or pressure containment components during pump operation can cause serious personal injury, death or major property damage**

### WARNING



Hazardous machinery can cause serious personal injury.

**Failure to disconnect and lockout electrical power or engine drive before attempting maintenance can cause severe personal injury or death.**

### WARNING



Hazardous pressure can cause severe personal injury or property damage

**Failure to relieve system pressure prior to performing pump service or maintenance can cause severe personal injury or property damage.**


### CAUTION



Extreme heat can cause injury or property damage.

**Failure to allow gear reducer to cool before attempting maintenance can cause serious personal injury.**

**NOTE:** Numbers in parentheses following individual parts indicate reference numbers on the corresponding Lip Seal Parts Lists.

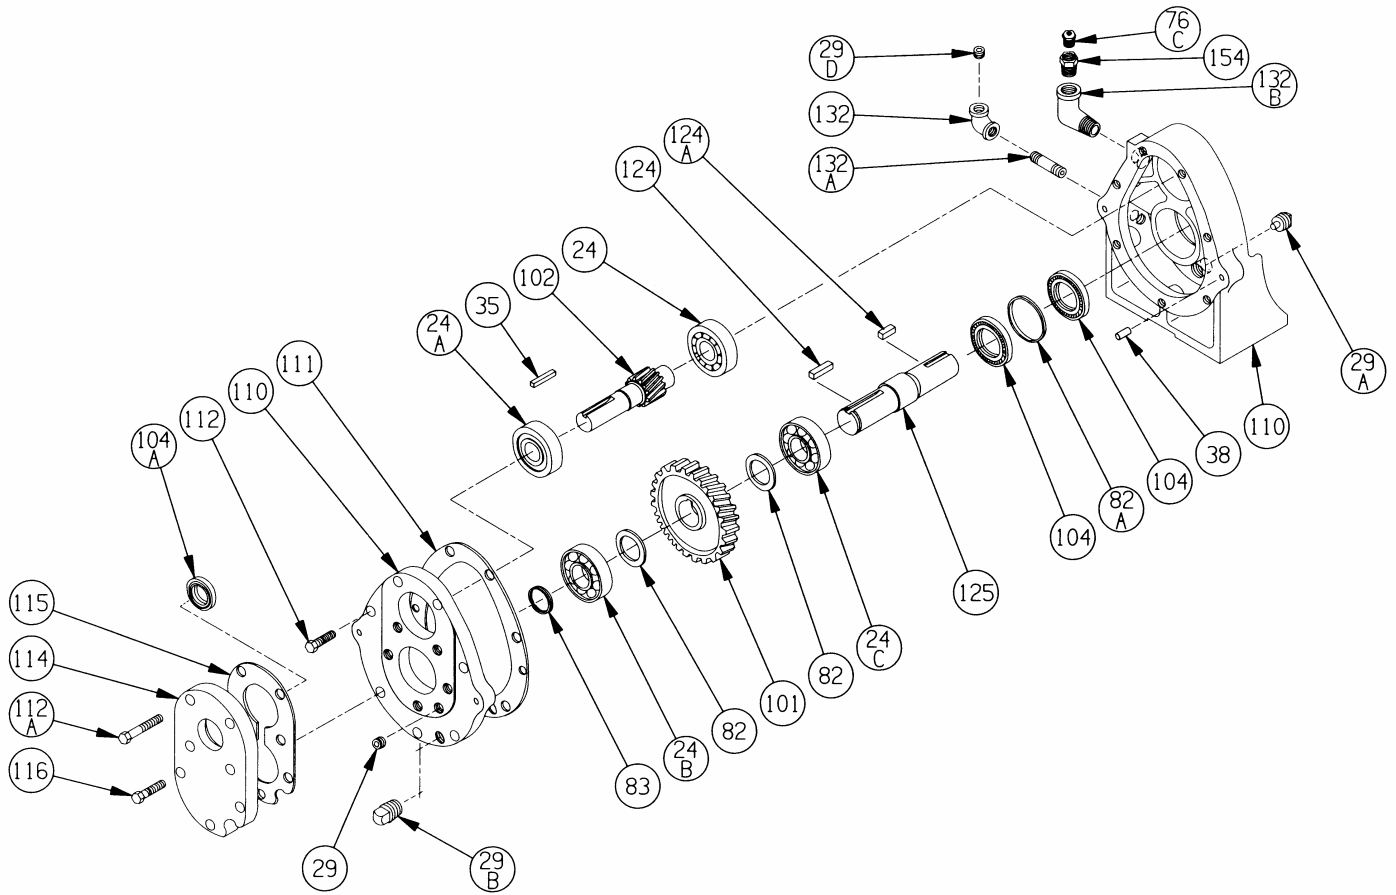

Ref. No.	Description	Parts per Unit	Part No.	Ref. No.	Description	Parts per Unit	Part No.
24	Bearing	1	903142	104	Oil Seal	2	331925
24A	Bearing – Shielded	1	903143	104A	Oil Seal	1	331921
24B	Bearing	1	903116	110	Gearbox Assembly <sup>1</sup>	1	894044
24C	Bearing – Shielded	1	903117	111	Gasket – Cover	1	814040
29	Pipe Plug	1	908187	112	Capscrews – Cover (5/16 - 18 x 1")	5	920203
29A	Drain Plug	1	908105	112A	Capscrews – Cover (5/16 - 18 x 1 1/4")	2	920235
29B	Pipe Plug	1	908198	114	Closure Plate	1	*
29D	Oil Level Plug	1	908187	115	Gasket – Closure Plate	1	814042
35	Key – Pinion	1	909166	116	Capscrews – Closure Plate	5	920178
38	Dowel Pin	2	930739	124	Key – Gear	1	909164
76C	Fill & Vent Plug	1	701988	124A	Key – Shaft	1	909165
82	Spacer Ring	2	374041	125	Shaft	1	704051
82A	Spacer Ring	1	374042	132	Elbow	1	908603
83	Retaining Ring	1	903603	132A	Nipple	1	908302
101	Gear	1	See Table	132B	Street Elbow	1	908573
102	Pinion & Shaft	1	See Table	154	Bushing	1	908794

\* Non-saleable item – included with Gearbox Assembly.

<sup>1</sup>Gearbox Assembly includes Ref. Nos. 38, 110, 111, 112, 112A, 114, 115, 116.

**GEAR AND PINION SELECTION TABLE**

RATIO	RPM	102 PINION NO.	QTY.	101 GEAR NO.	QTY.
2.24	780	915118	1	919918	1
2.72	640	915116	1	919916	1
3.32	520	915117	1	919917	1
4.10	420	915120	1	919920	1
4.94	350	915121	1	919921	1

**NOTE:** Speed is based on 1750 rpm input.

# INSTALLATION

## NOTICE

This product must only be installed in systems which have been designed by those qualified to engineer such systems. The system must be in accordance with all applicable regulations and safety codes and warn of any hazards unique to the particular system.

## ALIGNMENT ADJUSTMENT

To adjust the alignment of the gear reducer to the pump or motor, use shims as needed.

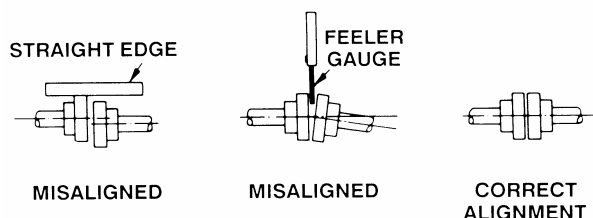


Figure 1 - Alignment Check

## COUPLING ALIGNMENT

Both angular and parallel coupling alignment MUST be maintained between the pump, gear, motor, etc. in accordance with manufacturer's instructions. See figure 1.

1. Parallel alignment: The use of a laser alignment tool or dial indicator is preferred. If a laser alignment tool or dial indicator is not available, use a straightedge. Turn both shafts by hand, checking the reading through one complete revolution. Maximum offset must be less than .005" (125 microns).
2. Angular alignment: Insert a feeler gauge between the coupling halves. Check the spacing at 90° increments around the coupling (four check points). Maximum variation must not exceed .005" (125 microns). Some laser alignment tools will check angular alignment as well.
3. Replace the coupling guards after setting alignment.

# MAINTENANCE

## NOTICE:

Maintenance and troubleshooting must be done by an individual experienced with pump and reducer maintenance and the type of system involved.

## NOTICE:

To avoid possible entanglement in moving parts do not lubricate pump bearings, gear reducer or any other parts while the pump is running.

**CAUTION:** The normal full load operating temperature of the gearcase is 180°F (82°C) – too hot to touch with the bare hand.

## LUBRICATION

**Gear reducers are not lubricated at the factory. Oil MUST be added before starting the pump.**

Horsepower calculations for Blackmer reducers are based on 75°F (24°C) ambient air temperature; 200°F (93°C) maximum oil temperature using synthetic oil.

Blackmer recommends using synthetic oil with oxidation inhibitors and is compatible with Buna elastomers. Use synthetic oil AGMA Viscosity Grade 4 or ISO Viscosity Grade 150 such as Mobil SHC 629, Shell Omala 150 HD, Castrol Isolube EP 150 or equivalent.

## To add oil to the gear reducer:

1. Remove the oil level plug (29D) and the fill and vent plug (76C). **NOTE:** The vent fitting in the fill plug (76C) should be kept clean to prevent expansion from forcing oil leaks at the shaft.
2. Add oil through the filler hole until oil runs out of the oil level hole – approximately 0.5 qt. (0.47 l) depending on the orientation of the reducer mounting.
3. Replace the oil level plug and the fill and vent plug.
4. After the first two weeks of operation, the oil should be drained, the gearcase flushed, and new oil added.

For normal operation, the oil should be changed every six months or 1000 hours, whichever is shorter. If operation is accompanied by frequent and wide changes in temperature, or if the unit operates in an unusually moist or dusty atmosphere, the oil should be changed every 500 hours or every three months.

## REDUCER DISASSEMBLY

The foot mounted gear reducer can usually be removed from its unit assembly without disturbing the motor or pump mounting.

1. Take apart the couplings and remove the capscrews in the foot mount.
2. Once the couplings are apart and the capscrews are removed, the reducer can be lifted away from the pump and motor.
3. Remove the cover capscrews (112 & 112A). **NOTE:** The gearcase cover is located on the gearcase with two (2) dowel pins (38). These pins remain in the gearcase.
4. After the capscrews have been removed, insert a wedge between the projecting lugs on the gearcase cover and tap lightly until the cover loosens and can be removed from the casing.
5. Remove the cover gasket (111).
6. The pinion & shaft (input shaft) (102) is a one-piece assembly and does not come apart. If necessary, the bearings (24 & 24A) can be removed from the shaft with the use of a bearing puller or arbor press.
7. To remove the gear (101) and bearings (24B & 24C) from the output shaft (125), use a gear puller or arbor press. Support the assembly on the gear and press the shaft out of the gear and bearings.

## OIL SEAL REPLACEMENT

1. To replace the oil seal (104A) on the **input shaft**, it is only necessary to remove the closure plate (114). Once the plate is removed, the old seal can be pressed out and a new one installed. Grease the lip of the oil seal before installing. The oil seal must be inserted such that the lip of the seal will face inward when the closure plate is reattached to the gearcase cover.
2. To replace the two (2) oil seals (104) on the **output shaft**, it is necessary to disassemble the body and cover assembly and remove the output shaft. (Refer to "Reducer Disassembly.") Grease the lip of one oil seal and insert it into the bearing bore of the gearcase so that the lip of the seal faces inward. Install the spacer ring (82A) and insert the second oil seal also with the lip facing inward.

## REDUCER ASSEMBLY

Before reassembling the gear reducer, clean each part thoroughly. Wash out the bearing bores and remove all burrs or sharp corners with a file.

**NOTE:** Disregard steps 1 and 2 if the shaft and bearing assemblies have not been dismantled.

1. The output shaft (125) has a stepped shoulder on one end (retaining ring end) to facilitate bearing and gear location.
  - a. Before installing the gear and bearings, remove all dirt, burrs, or sharp corners from the shaft to prevent galling or seizing of the gear and shaft.
  - b. Apply a coat of graphite, molysulphide, or white lead to the shaft.
  - c. Press the retaining ring end of the shaft squarely into the shielded bearing (24B). The shield of the bearing should be upward, so that the balls of the bearing will face the gear.
  - d. Install the spacer ring (82).
  - e. Align the gear key (124) with the notch in the gear (101), and press the gear squarely onto the shaft. Install the other spacer ring (82).
  - f. Press the second bearing (24C) squarely onto the shaft and add the retaining ring (83).
2. To assemble the input shaft (102) (Pinion & Shaft) a bearing must be pressed onto each end of the shaft.
  - a. Prior to installing the bearings, follow steps 1a and 1b.
  - b. Press the shielded bearing (24A) onto the driven end of the shaft (longer end) with the shield facing downward so that the balls of the bearing will face the pinion.
  - c. Press the second bearing (24) onto the opposite shaft end.
3. After the shafts, gears and bearings have been assembled, apply a light film of oil in the bearing bores of the gearcase to help the bearings slide into position.
4. If the oil seals (104) have been removed from the gearcase, they must be replaced prior to reassembly. Refer to step 2 of "Oil Seal Replacement."
5. To install the shaft assemblies into the gearcase it is easiest to tip the gearcase so that it is resting on the closed end, with the cavity opening upward.
  - a. Start the output shaft (125) into the bearing bore of the gearcase.
  - b. Align the bearings and gear teeth of the input shaft (102) with the output shaft and drop the two shaft assemblies together into their respective bearing bores.

**NOTE:** It is important to line the bearings up squarely with the bores in order for them to drop smoothly into place. If the bearings are positioned correctly in the gearcase, the shafts should rotate freely when turned by hand.
6. Once the input and output shaft assemblies are properly installed, set the cover gasket (111) on the gearcase.
7. Position the cover on the gearcase using the dowel pins for alignment.
8. Install and tighten the cover capscrews (112).
9. Make sure the oil seal (104A) is inserted in the closure plate (114) before reattaching the plate to the gearcase cover. Refer to step 1 of "Oil Seal Replacement."
10. Set the closure plate gasket (115) and the closure plate (114) on the gearcase cover. Install and tighten the remaining two (2) cover capscrews (112A), and the five (5) closure plate capscrews (116).

---

## TROUBLESHOOTING

### NOISE AND VIBRATION

#### POSSIBLE CAUSES:

1. Worn or damaged bearings.
2. Inadequate lubrication / use of wrong lubricant.
3. Impurities in the lubricant, such as abrasive particles.
4. Excessive overloading.
5. Misalignment to either pump or motor.

#### REMEDY:

Replace bearings.

Check oil condition. The lubricant may not be getting to the contact areas of the gear teeth, or the viscosity of the oil may be too low for the operating temperature (see "Lubrication").

Replace with clean oil (see "Lubrication")

Overloading causes overheating which may lower oil viscosity and thus cause the oil film on gear teeth contact surfaces to break down. The gears will begin to "groan" as the oil loses its effectiveness. If the loading is not decreased, the gear teeth will begin to "bite" into each other and wear out rapidly.

Recheck alignment and adjust as necessary.

